
RECHARGEABLE and ELECTRIC

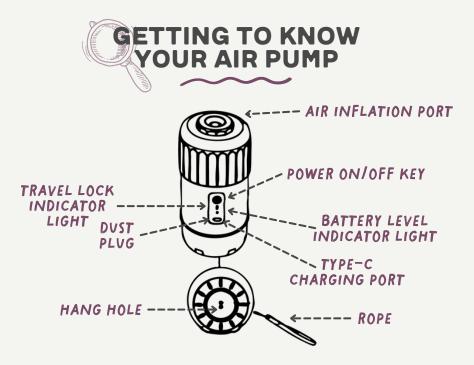



POWER INDICATOR

LOW POWER: • O The four indicators flash from left to right while charging.

FVLL POWER: •••• The four indicators are on.


This product is equipped with a travel lock function to avoid accidental activation in the luggage, the default is locked at the factory.

LOCK AND UNLOCK

- **LOCK:** Double click on the key, the travel lead light is on for 5 seconds and extinguished, indicating the air pump enters the mirror setting state (after clicking the switch, the travel mirror indicator flashes five times to indicate the air pump is locked).
- **VNLOCK:** When the travel lock is locked, double click on the key, and the travel lock indicator light is on for one second and extinguished, indicating that the air pump exits the locked state and can be used normally.

USAGE METHOD

Click on the on key, the air pump starts, and the power indicator shows the remaining power at the same time, the air pump will stop automatically after filling.

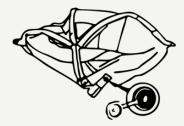



UNFOLD THE TENT


Unfold the tent and locate the two air valves on the tent.





TIGHTEN THE AIR VALVES

Connect the air valve's inflation port to the sealed port on the tent and turn clockwise to inflate.

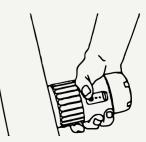








TURN THE INFLATION PUMP ON

Once it is fully tightened, it can inflate independently. The inflation will stop automatically once it is completed.

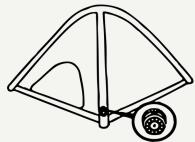




FINISH INFLATION

 When the inflation is finished and the pressure reaches the required level for the canopy, it will stop automatically.





To remove the air hose, rotate the needle clockwise.

THINGS TO KNOW

- Please not that this product is only suitable for household use and cannot be used for industrial purposes.
- When using this product, it should be placed in an environment with a temperature range of greater than -10°c and less than 40°c.
- Do not use it continuously for more than 10 minutes, and cool it down for at least 10 minutes to avoid direct sunlight or other harsh environments.
- Avoid immersing it in water or other liquids to prevent short circuits
- O This product is for adult use only.
- Do not expose the product to high temperatures or around heating equipment; including direct sunlight, ovens and other scenarios over 40°c, as the battery overheating could cause an explosion.
- Please charge after use to extend battery life.

- Please keep it away from harsh environments as adverse effects on the product may endanger your safety.
- The indicator light will go out immediately after unplugging the charging plug, when the product is charging, it will not work.
- During operation, if the power indicator light flashes for 3 seconds and then goes out, it indicates insufficient power and requires charging.
- A power adapter that meets GB4706.1-2005 standards must be used.
- O not use the charger in wet places and do not plug/unplug the charger with wet hands.
- No specific air pump maintenance is required, and the air pump has no user repairable parts.
- Ensure you store the product in a dry place.

If the air pump is not working properly;

- If the power indicator flashes red for 3 seconds and then goes out, this indicates insufficient power and the air pump needs to be charged.
- Check whether the inflation port is stuck or blocked by foreign objects.



LET'S CONNECT!

-



We'd love to see where your adventure takes you!

Whether it's a reel, a pitching time lapse, or a stunning setup pic, let us and the world see! Don't forget to give us a follow and TAG us, your creation could be featured on our socials and website!

www.boutiquecamping.com | +44 (0) 203 319 1315 | info@boutiquecamping.com
www.belltent.com | +1(929) 334 3212 | info@belltent.com