

 
GLAMPING WOOD BURNING STOVE



www.boutiquecamping.com



CONGRATULATIONS &

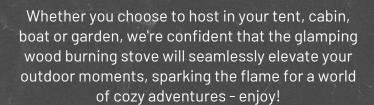

Ollie, Fiaz « team BC x

COMPONENTS CHECKLIST

GLAMPING WOOD
BURNING STOVE WITH
TOP PLATE

(PLUS XI SPARK ARRESTOR)

ASHTRAY

GLASS WINDOW

TOOL KIT



SETTING UP YOUR STOVE

To avoid damage in transit, we have packed the glass window separately.

Unwrap the glass window and locate the bolts, nuts, and rectangular washers provided.

Position the glass onto the rear of the door and:

- 1) Insert bolts front to back
- 2) Thread through a washer
- 3) Lock in to place by screwing on a nut



NOSTALGIC VIBES and & TOASTY NIGHTS FROM THE COMFORT OF YOUR TENT

If your tent is from our Polycotton or Cotton canvas range, you can safely install your stove to amplify your home-away-from-home interior and keep it toasty!

Fire retardant tents are available and recommended. Scan the QR code below to see how you can install a flashing kit.



*A carbon monoxide alarm inside the tent is recommended.



- When in use, avoid touching the stove and flue without gloves on.
- Open the firebox door to create air flow, allowing the fire to breathe.
- Always work in well ventilated spaces with a constant supply of fresh air.
- Do not leave anything combustible near the stove. If installed in a tent, we recommend that sides and top are at least 60cm away from the fabric.
- We recommend using a carbon monoxide alarm when in use, especially in a tent.

- Protect your groundsheet /grass/flooring with a flame retardant heat mat (just in case hot embers escape).
- For extra stability on windy days, we recommend attaching two ropes to the holes in the spark arrestor and pegging firmly into the ground.
- To slow the fire, close the valve located above the window. Opening this will increase airflow and boost the fire, keeping it lit for longer.
- As the fire box is quite small in width we recommend using kindling or small logs along with fire starters
- If you are using the stove with a flashing kit, to minimise risks of the flue overheating, monitor the temperature to ensure it does not exceed 200°c.



OUR FAVE STOVE ADD-ONS





STOVE FAN



XL FLASHING







SOMETHING NOT QUITE RIGHT?

We hope that you will absolutely LOVE your new Wood Burning Stove, but if you aren't 100% happy, our customer care team is here to assist and find a solution for you!

Please note, Boutique Camping accepts no responsibility for the use or misuse of our stoves. We only recommend using stoves inside fire-retardant or breathable fabric tents that are ventilated and have the correct flue (chimney) installation.

We advise that your stove is never left unattended, especially around children or pets. It is important that when in use, the stove is propped on a heat and fireproof mat.



WE'VE MOVED OUR RETURNS FORM ONLINE!

If you wish to return or exchange your purchase you must notify us within 14 days of receiving your product by scanning the code below and filling out our online returns request form.







LET'S CONNECT!



We'd love to see where your adventure takes you!

Give us a follow and don't forget to TAG us... Your heart-warming moments and creative camping-cooks could be featured on our socials and website!



www.boutiquecamping.com www.belltent.com www.boutiquecamping.au.com