

Boutique
Camping

WHERE WILL YOUR
ADVENTURE
TAKE YOU...

INSTRUCTION MANUAL



TUCANA TENT

SINGLE and DOUBLE DOOR



SCAN HERE
FOR VIDEO
TUTORIAL!

COMPONENTS CHECKLIST

TENT WITH ATTACHED WEBBING *and* GROUNDSHEET

TENT BAG

RUBBER Mallet

FULL SET OF STEEL PEGS


XI CENTRE POLE

XI OR X2 CROSS BARS (X2 FOR DOUBLE DOOR)

X4 OR X8 DOORWAY POLES (X8 FOR DOUBLE DOOR)

INSTRUCTION MANUAL

SPARES BAG

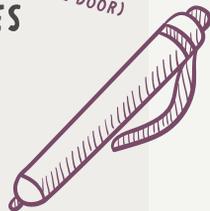

PLEASE NOTE: If you've opted for a Double Door Tucana Tent, the same pitching methods will apply, with the exception of Step 4, 5 and Step 7.



GETTING TO KNOW YOUR TENT



EXCLUSIVE FOR DOUBLE DOOR!

Park up your RV or Camper Van along one of the doorways. Extend porch ropes and strap over vehicle!

INTEGRATED POLE LOOP

To hang a chandelier, inner tent, lighting or other decor!



PLASTIC LOOPS

To attach an inner tent or hang fairy lights!

SEE MAINTENANCE AND TLC PAGE FOR TIPS ON CLEANING AND RE-PROOFING!

FABRIC

Treated with UV, rot and water repelling agent.

MESH VENTS



WEBBING STRAPS

- ✓ Minimise tripping hazards
- ✓ Use rebar pegs (grooved) to secure
- ✓ Can be adjusted for desired tension



ZIPPABLE GROUND SHEET

If pitching your tent as a stand-alone shelter, unzip the groundsheet AFTER the tent has been erected.

MESH WINDOWS

To ventilate your tent, unzip the fabric layer from the inside.

ENTRANCE POINT

Create a seamless entry and use standard pegs (smooth) to flatten the groundsheet's entrance point.

ELECTRIC HOOK UP FLAP

Use the savvy zipped-flap to safely thread electrical wires into your tents' living space.


INSTALLING A STOVE IN YOUR TENT?



SCAN HERE!



STANDARD PEGS (SMOOTH)

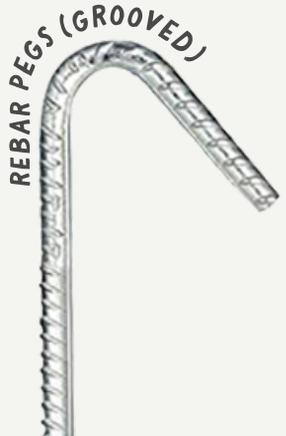

REBAR PEGS (GROOVED)



PLOT PREPARATION + PITCH PERFECTION

 


ACHIEVING PITCH PERFECTION



- ✔ Ensure your plot is flat and bump free, uneven surfaces or hill tops may apply too much uneven tension and result in damage.
- ✔ Avoid pitching your tent under trees unless you have a tent protector cover or shelter.
- ✔ Pitching your tent on a groundsheet protector will not only guide you when erecting your tent, but it will also protect the groundsheet from dirt, water and condensation.
- ✔ Before securing down the pegs, zip all doors closed.
- ✔ Kinks and creases in the fabric suggest that the tension in the tent is uneven and can result in damage. When pitching your tent, ensure that the poles are straight and guy ropes are adjusted accordingly.
- ✔ The groundsheet zip must be concealed and hidden by the skirt of the tent.

ONCE IT'S UP..



- ✔ Frequently check that the pegs are secured tightly and have not become loose, this is particularly important after wet weather as the grounds will become soft.
 - ✔ Air your tent out daily to increase the ventilation. This can be done by opening the doors, windows (and if applicable) unzipping the groundsheet and rolling up the sides.
 - ✔ If you spot any marks, dirt or mildew spots, tackle them right away to prevent the issue from staining or spreading.
- 

WATERPROOFING *and* LEAK PREVENTION



On the first occasion that your tent experiences a heavy rainfall, although unlikely, you may find small leaks around the seams of the fabric. Don't worry, as this is normal!

Once it has fully dried out, the cotton will naturally shrink and close any holes to ensure your tent becomes completely watertight.

To completely avoid this when on your camping adventure, you can erect the tent in your garden (if possible) and hose it down with water.





PITCHING YOUR TUCANA TENT

IF THE GROUNDS ARE DRY + YOU ARE STRUGGLING TO HAMMER YOUR PEGS INTO THE GROUND, DRENCH THE DRY AREA WITH WATER FIRST!

TOP TIP!



1



1A. UNPACK YOUR TENT + LAY IT OUT WITH THE GROUND SHEET FLOOR FACING.

1B. MAKE SURE THE GROUND IS FLAT + FREE FROM SHARP OBJECTS.

1C. FIND THE DOOR + ROTATE TO FACE THE DESIRED DIRECTION.

2A. KEEPING THE TENT FABRIC ON TOP OF THE BASE, STRETCH OUT THE GROUND SHEET TO FORM THE BASE SHAPE.

2B. LOCATE THE ELASTIC RINGS + THREAD THE STANDARD PEGS (SMOOTH) THROUGH THE RING + THE EYELET TO FIX YOUR BASE TO THE GROUND.

2C. SPREAD THE ROPES + USE THE SLIDERS TO SHORTEN EACH ROPE TO APPROX. 1M IN LENGTH.

2



3



3A. LOCATE THE CENTRE POLE + BRING INSIDE THE TENT.

3B. PUSH THE POLE UPWARDS INTO THE CONE (THIS WILL BE THE POLE END WITH THE INTEGRATED LOOP) + ERECT IT VERTICALLY.

3C. ENSURE THAT THE POLE IS STRAIGHT + LOCATED AT THE CENTRE POINTS OF BOTH THE GROUND SHEET + ROOF.

4A. TO FORM THE DOORWAY, LOCATE X2 POLES + X1 CROSS BAR.

4B. POSITION THE CROSS BAR ALONG THE WIDTH OF THE DOORWAY, MATCHING UP THE POLES' METAL HOLES TO THE FABRIC EYELETS.

4C. PUSH THE SPIKES FOUND ON THE DOOR POLES THROUGH BOTH LAYERS TO HOLD IN PLACE.

4



*For Double Door tents, repeat this stage for mirrored doorway.



PITCHING YOUR TUCANA TENT



5



IF THE DOORWAY IS STRUGGLING TO STAY UP, PLEASE USE A REBAR PEG (GROOVED) TO TACK ONE OF THE DOOR GUY ROPES IN PLACE.



TOP TIP!



6A. USING THE REBAR PEGS (GROOVED), PEG OUT THE WEBBING AT LEAST 1M AWAY FROM THE TENT STRAPS.

6B. DO NOT APPLY TOO MUCH TENSION, BUT ENOUGH TO CREATE SHAPE AND SMOOTHED FABRIC.



6

7



7A. YOU WILL HAVE X2 POLES LEFT OVER TO ASSEMBLE THE PORCH.

7B. THREAD THE SPIKES THROUGH THE METAL EYELETS IN THE FABRIC + PIERCE THE BOTTOM OF THE POLES STRAIGHT + DIRECTLY INTO THE GROUND.

7C. LOCATE THE GUY ROPES + PEG 1-2M AWAY FROM THE TENT USING REBAR PEGS (GROOVED).

*For Double Door tents, repeat this stage for mirrored doorway.

8A. ONCE THE PEGS ARE IN, ADJUST THE WEBBING STRAPS + GUY ROPES FOR DESIRED TENSION.

8B. YOUR TUCANA TENT SHOULD LOOK AS PICTURED!



8





DRESSING YOUR TUCANA TENT



HERE'S SOME INSPO!



RECOMMENDED BC ADD-ONS



CENTRE POLE TABLE



INNER TENT



CHANDELIER



MATTING



PACKING AWAY & STORING YOUR TENT

It is **VITAL** that your tent is only stored once it is bone dry. If you store your tent whilst it's damp or wet, it may be affected by mildew. This can result in deterioration of the tents' fabric.

It's perfectly fine to take down your tent whilst it is still wet. However, you **MUST** ensure to hang it up to dry within 48 hours. This can be achieved by hanging the tent on a washing line, or equivalent, and leaving it to air dry. Separating the groundsheet will speed up this process.



- 1A.** REMOVE ALL PEGS, YOU CAN USE YOUR HANDS, A PEG EXTRACTOR OR EVEN ANOTHER PEG.
- 1B.** IF PEGS ARE DIRTY, CLEAN BEFORE PUTTING THEM BACK IN THEIR BAG.
- 1C.** REMOVE POLES FROM THE TENT + IF NECESSARY, ALSO GIVE THEM A CLEAN AND TOWEL DRY.
- 1D.** KEEP THE CANVAS ON TOP OF THE GROUND SHEET + NOT IN CONTACT WITH THE GRASS/GROUND.

- 2A.** WITHOUT STANDING ON THE CANVAS, FOLD THEN TENT IN HALF LONGWAYS.
- 2B.** REPEAT THIS ACTION ONCE MORE SO YOU NOW HAVE A SLIM RECTANGLE SHAPE.
- 2C.** USE YOUR BODY WEIGHT TO FLATTEN + EXTRACT ANY TRAPPED AIR.



- 3A.** NOW FOLD IN HALF LENGTHWAYS + REPEAT THE SMOOTHING PROCESS.



- 4A.** SMOOTHING + RELEASING ANY TRAPPED AIR AS YOU GO, BEGIN TO TIGHTLY ROLL THE TENT FORWARDS.
- 4A.** ONCE COMPLETED, USE THE STRAPS TO SECURE THE ROLLED UP TENT + PLACE BACK INTO THE TENT BAG.



STORING YOUR TENT..

Store your tent away in a dry place, free of damp and excessive condensation. We would advise placing it in a high place, away from rodents!

CLEANING YOUR TENT



To remove any dirt, light marks or mud off your tent you will need to pitch it before cleaning. To tackle marks we advise a sot mop, a soft brush and sponge to apply either:

'NIKWAX TENT AND GEAR SOLARWASH' OR 'NIKWAX COTTON PROOF'

...before rinsing off with water.

To remove any dirt, light marks or mud off your tent you will need to pitch it before cleaning. If you're looking to wash the whole tent we advise mixing the cleaning agents above with water in a pump action pressure garden sprayer.

SHOP OUR
CLEANING
PRODUCTS



WATCH
DEMONSTRATION
VIDEO





REPROOFING YOUR TENT



Your tent will have a generous coating of our water, rot and UV repelling agent. Over time, as a result of heavy use or testing environments, your tent fabric may require a second coating to revive breathability and resistance to the elements.

This can be done by using a garden spray to apply the following agents:

'NIKWAX TENT AND GEAR SOLARWASH' OR 'NIKWAX COTTON PROOF'



READ OUR FULL
MAINTENANCE
GUIDE



RETURNS POLICY

We are certain you are going to love your next tent, however, if you have a change of heart you are entitled to a refund or exchange within 14 days of receiving your item/s. Please note, unpackaged or used tents may be subject to this. To make your request, please complete the online returns form on our website:

www.boutiquecamping.com/return-form-i524




HAVE A CAMPING QUERY?

EMAIL US:
INFO@BOUTIQUECAMPING.COM
and WE'LL BE HAPPY TO ASSIST!



LET'S CONNECT!

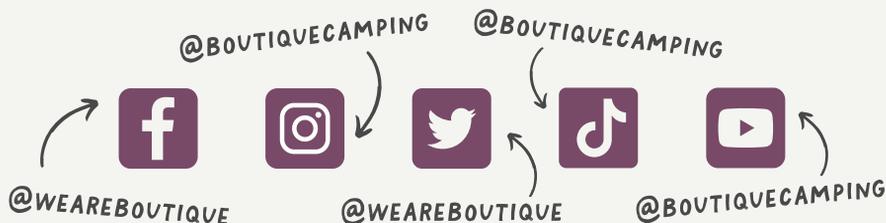

We'd love to see where your adventure takes you!

Whether it's a reel, a pitching time lapse, or a stunning setup pic, let us and the world see! Don't forget to give us a follow and TAG us, your creation could be featured on our socials and website!

 www.boutiquecamping.com | +44 (0) 203 319 1315 | info@boutiquecamping.com

 www.belltent.com | +1(929) 334 3212 | info@belltent.com