

Boutique
Camping

WHERE WILL YOUR
ADVENTURE
TAKE YOU...

INSTRUCTION MANUAL.




BELL AIR PLUS



SCAN HERE
FOR VIDEO
TUTORIAL!

COMPONENTS CHECKLIST

- ☐ TENT WITH ATTACHED WEBBING STRAPS and GROUND SHEET
- ☐ TENT BAG
- ☐ RUBBER Mallet
- ☐ FULL SET OF STEEL PEGS
- ☐ MANUAL PUMP
- ☐ X4 WALL POLES
- ☐ INSTRUCTION MANUAL
- ☐ SPARES BAG

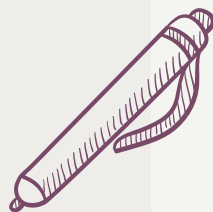

GETTING TO KNOW YOUR TENT

SEE MAINTENANCE AND TLC PAGE FOR TIPS ON CLEANING AND RE-PROOFING!

FABRIC

Treated with UV, rot and water repelling agent.

PLASTIC LOOPS

To attach an inner tent or hang fairy lights!

TPV AIRTUBES + EXTERNAL TUBE VALVES

External valve for inflation & deflation
Internal valve for overpressure monitoring

INTERNAL MESH POCKET

To store small belongings.

WEBBING STRAPS

- ✓ Minimise tripping hazards
- ✓ Can be adjusted for desired tension
- ✓ Use rebar pegs (grooved) to secure

MESH WINDOWS

To ventilate your tent, unzip the fabric layer from the inside.

ROLL UP WALLS

With toggle and loop system.

INSTALLING A STOVE IN YOUR TENT?



SCAN HERE!



MESH VENTS



DOORWAY OVERHANG

To redirect rainpour.

A-FRAME SPIKE WITH SCREW ON RAIN CAPS

Use to attach a canopy or awning to hang bunting and fairy lights!

ARCHED HEM

To redirect rainpour.

ZIPPABLE GROUND SHEET

If pitching your tent as a stand-alone shelter, unzip the groundsheet AFTER the tent has been erected & use the toggle and loop system to hold the walls up.


ENTRANCE POINT

Create a seamless entry and use standard pegs (smooth) to flatten the groundsheets' entrance point.

ELECTRIC HOOK UP FLAP


Use the savvy zipped-flap to safely thread electrical wires into your tents' living space.

STANDARD PEGS (SMOOTH)

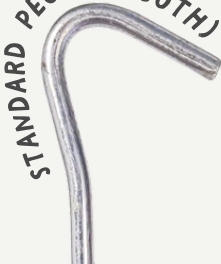

REBAR PEGS (GROOVED)



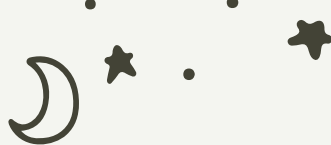

PLOT PREPARATION + PITCH PERFECTION

ACHIEVING PITCH PERFECTION

- ✓ Ensure your plot is flat and bump free, uneven surfaces or hill tops may apply too much uneven tension and result in damage.
- ✓ Avoid pitching your tent under trees unless you have a tent protector cover or shelter.
- ✓ Pitching your tent on a groundsheet protector will not only guide you when erecting your tent, but it will also protect the groundsheet from dirt, water and condensation.
- ✓ Before securing down the pegs, zip all doors closed.
- ✓ Kinks and creases in the fabric suggest that the tension in the tent is uneven and can result in damage. When pitching your tent, ensure that the poles are straight and guy ropes are adjusted accordingly.
- ✓ The groundsheet zip must be concealed and hidden by the skirt of the tent.



ONCE IT'S UP..

- ✓ Frequently check that the pegs are secured tightly and have not become loose, this is important after wet weather as the grounds will become soft.
- ✓ Air your tent out daily to increase the ventilation. This can be done by opening the doors, windows (and if applicable) unzipping the groundsheet and rolling up the sides.
- ✓ If you spot any marks, dirt or mildew spots, tackle them right away to prevent the issue from staining or spreading.
- ✓ Monitor your tents air pressure by plugging in your pump and ensuring the pressure falls within 8-10 PSI.



WATERPROOFING and LEAK PREVENTION



On the first occasion that your tent experiences a heavy rainfall, although unlikely, you may find small leaks around the seams of the fabric. Do not worry, as this is normal!

Once it has fully dried out, the cotton will naturally shrink and close any holes to ensure your tent becomes completely watertight.

To completely avoid this when on your camping adventure, you can erect the tent in your garden (if possible) and hose it down with water.



PITCHING YOUR BELL AIR PLUS

IF THE GROUND IS DRY + YOU ARE STRUGGLING TO HAMMER YOUR PEGS INTO THE GROUND, DRENCH THE DRY AREA WITH WATER FIRST!

TOP TIP!

1



1A. UNPACK YOUR TENT + LAY IT OUT WITH THE GROUND SHEET FLOOR FACING.

1B. MAKE SURE THE GROUND IS FLAT + FREE FROM SHARP OBJECTS.

1C. FIND THE DOOR + ROTATE TO FACE THE DESIRED DIRECTION.

2A. KEEPING THE TENT FABRIC ON TOP OF THE BASE, STRETCH OUT THE GROUND SHEET TO FORM A PERFECT CIRCLE.

2B. LOCATE THE ELASTIC RINGS + THREAD THE STANDARD PEGS (SMOOTH) THROUGH THE RING + THE EYELET TO FIX YOUR BASE TO THE GROUND.

2



3



3A. LOCATE THE MANUAL PUMP AND SCREW ONTO THE EXTERNAL VALVE (COLOUR MAY DIFFER)

3B. PUMP UP THE TENT UNTIL THE GAUGE READS 5 PSI. ONCE BEAMS ARE HALF INFLATED, ENTER THE TENT AND PUSH THE WALLS UP TO HELP AIR FLOW.

3C. ONCE THE GAUGE READS 5PSI YOU CAN REMOVE PUMP AND TIGHTLY CLOSE THE VALVE.

(IF YOU HEAR A HISsing NOISE FROM INSIDE THE TENT, THIS IS THE OVERPRESSURE VALVE TELLING YOU THERE IS TOO MUCH AIR, SIMPLY RELEASE SOME AIR FROM THE EXTERNAL VALVE UNTIL HISsing STOPS)

4. ZIP UP THE DOOR + USE THE REBAR PEG TO SECURE DOWN THE EXTRA LONG GUY ROPE FOUND ON THE HIGHEST POINT OF THE DOORWAY.

4





PITCHING YOUR BELL AIR PLUS



5A. LOCATE THE WALL POLES AND UNSCREW THE RAIN CAPS, THEY SHOULD BE PITCHED ON THE OUTER WALLS AT THE REAR OF THE TENT.

5B. PLACE THE THREAD THROUGH THE EYELET ON THE TENT (TOP) AND THE BLACK SPIKE IN THE EYELET ON THE GROUND SHEET (BOTTOM).

5C. SCREW ON THE RAIN CAP.

6A. LOOSEN THE WEBBING STRAP, PULL IT OUT, AND PEG IT DOWN USING THE REBAR PEGS. ONCE THIS IS COMPLETED AROUND THE FULL TENT, TIGHTEN THE WEBBING STRAPS TO AN EQUAL TENSION.

6B. BE CAREFUL NOT TO OVER-TIGHTEN, AS THIS WILL PUT UNNECESSARY TENSION ON THE CANVAS AND AIR TUBES.



7



7. YOUR BELL AIR PLUS SHOULD NOW LOOK AS PICTURED!





DRESSING YOUR BELL AIR PLUS




HERE'S SOME INSPO!



RECOMMENDED BC ADD-ONS



PIZZA OVEN

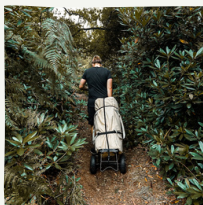

TENT TROLLEY



TENT COVER



MATTING



PACKING AWAY & STORING YOUR TENT

It is VITAL that your tent is only stored once it is bone dry. If you store your tent whilst it's damp or wet, it may be affected by mildew. This can result in deterioration of the tents' fabric.

It's perfectly fine to take down your tent whilst it is still wet. However, you MUST ensure to hang it up to dry within 48 hours. This can be achieved by hanging the tent on a washing line, or equivalent, and leaving it to air dry. Separating the groundsheet will speed up this process.

1



- 1A.** REMOVE ALL PEGS. YOU CAN USE YOUR HANDS, A PEG EXTRACTOR OR EVEN ANOTHER PEG.
- 1B.** REMOVE A-FRAME FROM THE TENT + IF NECESSARY, ALSO GIVE THEM A CLEAN AND TOWEL DRY.
- 1C.** UNSCREW THE EXTERNAL VALVE TO RELEASE AIR
- 1D.** KEEP THE CANVAS ON TOP OF THE GROUND SHEET + NOT IN CONTACT WITH THE GRASS/GROUND.

2A. WITHOUT STANDING ON THE CANVAS, FOLD THEN TENT IN HALF + BACK ON ITSELF.

2B. YOUR TENT SHOULD NOW RESEMBLE A HALF MOON SHAPE.

2



3



3A. BRING THE CURVED EDGE BACK ON ITSELF SO THAT YOU ARE LEFT WITH A RECTANGLE.

3B. THEN, FOLD IT IN HALF LENGTHWAYS.

4



4A. SMOOTHING + RELEASING ANY TRAPPED AIR AS YOU GO. BEGIN TO TIGHTLY ROLL THE TENT FORWARDS.

4B. ONCE COMPLETED, USE THE STRAPS TO SECURE THE ROLLED UP TENT + PLACE BACK INTO THE PROVIDED TENT BAG.



STORING YOUR TENT..

Store your tent away in a dry place, free of damp and excessive condensation. We would advice placing it in a high place, away from rodents!

CLEANING YOUR TENT



To remove any dirt, light marks or mud off your tent you will need to pitch it before cleaning. To tackle marks we advise a sot mop, a soft brush and sponge to apply either:

'NIKWAX TENT AND GEAR SOLARWASH' OR 'NIKWAX COTTON PROOF'

...before rinsing off with water.

To remove any dirt, light marks or mud off your tent you will need to pitch it before cleaning. If you're looking to wash the whole tent we advise mixing the cleaning agents above with water in a pump action pressure garden sprayer.

SHOP OUR
CLEANING
PRODUCTS



WATCH
DEMONSTRATION
VIDEO





REPROOFING YOUR TENT



Your tent will have a generous coating of our water, rot and UV repelling agent. Over time, as a result of heavy use or testing environments, your tent fabric may require a second coating to revive breathability and resistance to the elements.

This can be done by using a garden spray to apply the following agents:

'NIKWAX TENT AND GEAR SOLARWASH' OR 'NIKWAX COTTON PROOF'

READ OUR FULL
MAINTENANCE
GUIDE



RETURNS POLICY

We are certain you are going to love your next text, however, if you have a change of heart you are entitled to a refund or exchange within 14 days of receiving your item/s. Please note, unpackaged or used tents may be subject to this. To make your request, please complete the online returns form on our website:

www.boutiquecamping.com/return-form-i524




HAVE A CAMPING QUERY?

EMAIL US:
[INFO@BOUTIQUECAMPING.COM](mailto:info@boutiquecamping.com)
and WE'LL BE HAPPY TO ASSIST!



LET'S CONNECT!

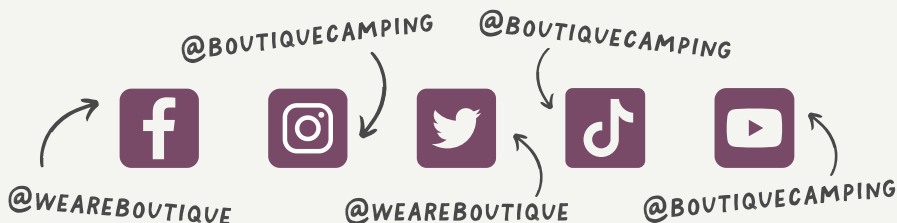

We'd love to see where your adventure takes you!

Whether it's a reel, a pitching time lapse, or a stunning setup pic, let us and the world see! Don't forget to give us a follow and TAG us, your creation could be featured on our socials and website!

www.boutiquecamping.com | +44 (0) 203 319 1315 | info@boutiquecamping.com

 +1(929) 334 3212