

Boutique
Camping

WHERE WILL YOUR
ADVENTURE
TAKE YOU...

INSTRUCTION MANUAL



PHOENIX TENT



SCAN HERE
FOR VIDEO
TUTORIALS!

COMPONENTS CHECKLIST

☐

TENT WITH ATTACHED GUY
ROPES *and* GROUND SHEET

☐

TENT BAG

☐

RUBBER Mallet

☐

FULL SET OF STEEL PEGS

☐

X1 CENTRE POLES

☐

X8 FLEXI DOOR POLES


(X4 YELLOW CODED + X4 RED CODED)

☐

INSTRUCTION MANUAL

☐

SPARES BAG

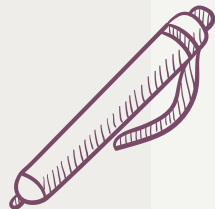



GETTING TO KNOW YOUR TENT

FABRIC

Treated with UV, rot and water repelling agent.

SEE MAINTENANCE AND TLC PAGE FOR TIPS ON CLEANING AND RE-PROOFING!

DOUBLE DOOR PANELS

Use the toggle and loop system to open one of both doors. Opt for full privacy, full ventilation or roll up just the canvas layer for a bug free breeze by zipping closed the mesh later.

MESH VENTS




INTEGRATED POLE LOOP

To hang a chandelier, inner tent, lighting or other decor!

X4 INTEGRATED CANOPIES

To shelter doorway and create extended shelter come rain or shine.

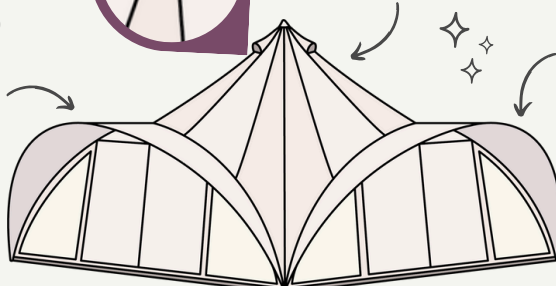

GUY ROPES

- ✓ Reflective to minimise tripping hazards
- ✓ Adjust via savvy toggles
- ✓ Use rebar pegs (grooved) to secure

ZIPPABLE GROUND SHEET

If pitching your tent as a stand-alone shelter, unzip the groundsheet AFTER the tent has been erected.

ENTRANCE POINT

Create a seamless entry and use standard pegs (smooth) to flatten the groundsheets' entrance point.

TRANSPARENT WINDOW PANELS

Stargaze at night or let the light shine through in the day via the transparent panels that have internal secondary canvas layers that can be unzipped and rolled.

INSTALLING A STOVE IN YOUR TENT?



SCAN HERE!



STANDARD PEGS (SMOOTH)

REBAR PEGS (GROOVED)





PLOT PREPARATION + PITCH PERFECTION



ACHIEVING PITCH PERFECTION

- ✓ Ensure your plot is flat and bump free, uneven surfaces or hill tops may apply too much uneven tension and result in damage.
- ✓ Avoid pitching your tent under trees unless you have a tent protector cover or shelter.
- ✓ Before securing down the pegs, zip all doors closed.
- ✓ Kinks and creases in the fabric suggest that the tension in the tent is uneven and can result in damage. When pitching your tent, ensure that the poles are straight and guy ropes are adjusted accordingly.
- ✓ The groundsheet zip must be concealed and hidden by the skirt of the tent.

ONCE IT'S UP..

- ✓ Frequently check that the pegs are secured tightly and have not become loose, this is particularly important after wet weather as the grounds will become soft.
- ✓ Air your tent out daily to increase the ventilation. This can be done by opening up the doors and windows.
- ✓ If you spot any marks, dirt or mildew spots, tackle them right away to prevent the issue from staining or spreading.

WATERPROOFING and LEAK PREVENTION

On the first occasion that your tent experiences a heavy rainfall, although unlikely, you may find small leaks around the seams of the fabric. Do not worry, as this is normal!

Once it has fully dried out, the cotton will naturally shrink and close any holes to ensure your tent becomes completely watertight.

To completely avoid this when on your camping adventure, you can erect the tent in your garden (if possible) and hose it down with water.





PITCHING YOUR PHOENIX TENT

IF THE GROUNDS ARE DRY + YOU ARE STRUGGLING TO HAMMER YOUR PEGS INTO THE GROUND, DRENCH THE DRY AREA WITH WATER FIRST!

TOP TIP!

1



1A. UNPACK YOUR TENT AND LAY FLAT ON A LEVEL SURFACE, FREE OF SHARP OBJECTS.

1B. POSITION YOUR TENT IN A DESIRED SPOT. THEN, KEEPING THE TENT FABRIC ON TOP OF THE BASE, STRETCH OUT THE GROUND SHEET TO FORM A SQUARE.

2A. ENSURING THAT THE FABRIC IS TAUT, STARTING WITH THE CORNERS OF THE TENT, PEG DOWN THE GROUND SHEET WITH THE X16 SMOOTH PEGS SUPPLIED.

2



3



3A. UNRAVEL ALL GUY ROPES ON THE TENT FROM THEIR PACKAGING.

4A. ASSEMBLE THE CENTRE POLE AND LOCATE THE CONE INSIDE OF THE TENT, THEN PUSH THE POLE UP VERTICALLY UNTIL STRAIGHT AND CENTRED FLOOR TO ROOF.

4B. MAKE SURE THE END OF THE POLE WITH THE INTEGRATED LOOP IS AT THE TOP.

4



TIP: HOLDING THE DOOR OPEN HELPS WITH THE AIR VACUUM AND ALLOWS THE POLE TO GO UP EASIER.

5



5A. LOCATE AND ASSEMBLE ALL COLOUR CODED (RED AND YELLOW) FLEXI POLES.

5B. ON EACH CORNER OF THE TENT, YOU WILL FIND COLOUR CODED SLEEVES FOR THE FLEXI POLES.

5C. TO START, GRAB A RED FLEXI POLE AND START THREADING THROUGH THE RED SLEEVE, THIS WILL BECOME YOUR CANOPY.



PITCHING YOUR PHOENIX TENT

- 6A.** FIT THE ENDS OF THE RED FLEXI POLE ONTO THE CORRECT PINS AT THE CORNERS OF THE TENT (ONE IS FOR RED, AND THE OTHER IS FOR YELLOW).



- 7A.** REPEAT THIS PROCESS FOR THE YELLOW CODED FLEXI POLE AND SLEEVE (ON THE SAME SECTION OF THE TENT AS THE RED THAT YOU HAVE JUST COMPLETED).



- 8A.** ENSURE THE GUY ROPES ARE NOT TANGLED UNDERNEATH THE FLEXI POLES AFTER CLIPPING THE PINS IN. IF THEY ARE, UNCLIP THE PINS AND RELEASE THE GUY ROPES AS SHOWN.



REPEAT STEPS 5-8 FOR THE REMAINING X3 CANOPIES!

- 9A.** NEXT, PEG OUT THE X2 GUY ROPES THAT ARE POSITIONED ABOVE THE CENTRE OF THE TENT DOORS, AND REPEAT FOR ALL SIDES OF THE TENT.

- 9B.** ROPES SHOULD BE APPROX. 1.5M-2M IN LENGTH.



- 10A.** AT EACH CORNER OF THE TENT, UNRAVEL THE GUY ROPE, ADJUST TO DESIRED LENGTH AND PEG DOWN THE X4 GUY ROPES.



- 11A.** LASTLY, PEG DOWN THE X8 REMAINING GUY ROPES.

- 11B.** ONCE YOU HAVE PEGGED DOWN ALL GUY ROPES, CHECK FOR UNEVEN TENSION AROUND THE TENT AND ADJUST ACCORDINGLY.



DRESSING YOUR PHOENIX TENT



HERE'S SOME INSPO!



RECOMMENDED BC ADD-ONS




THE ORIGINAL
PIZZA OVEN



XL
FLASHING KIT



CHANDELIER

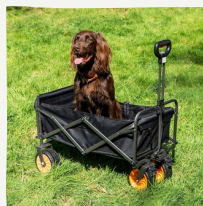

ELECTRIC
WAGON



PACKING AWAY & STORING YOUR TENT

It is **VITAL** that your tent is only stored once it is bone dry. If you store your tent whilst it's damp or wet, it may be affected by mildew. This can result in deterioration of the tents' fabric.

It's perfectly fine to take down your tent whilst it is still wet. However, you **MUST** ensure to hang it up to dry within 48 hours. This can be achieved by hanging the tent on a washing line, or equivalent, and leaving it to air dry. Separating the groundsheet will speed up this process.

1



- 1A.** REMOVE ALL PEGS, YOU CAN USE YOUR HANDS, A PEG EXTRACTOR OR EVEN ANOTHER PEG.
- 1B.** IF PEGS ARE DIRTY, CLEAN BEFORE PUTTING THEM BACK IN THEIR BAG.
- 1C.** REMOVE POLES FROM THE TENT + IF NECESSARY, ALSO GIVE THEM A CLEAN AND TOWEL DRY.
- 1D.** KEEP THE CANVAS ON TOP OF THE GROUNDsheet + NOT IN CONTACT WITH THE GRASS/GROUND.

- 2A.** WITHOUT STANDING ON THE CANVAS, FOLD THEN TENT IN HALF LONGWAYS.
- 2B.** REPEAT THIS ACTION ONCE MORE SO YOU NOW HAVE A SLIM RECTANGLE SHAPE.
- 2C.** USE YOUR BODY WEIGHT TO FLATTEN + EXTRACT ANY TRAPPED AIR.



3



- 3A.** NOW FOLD IN HALF LENGTHWAYS + REPEAT THE SMOOTHING PROCESS.



- 4A.** SMOOTHING + RELEASING ANY TRAPPED AIR AS YOU GO, BEGIN TO TIGHTLY ROLL THE TENT FORWARDS.
- 4A.** ONCE COMPLETED, USE THE STRAPS TO SECURE THE ROLLED UP TENT + PLACE BACK INTO THE TENT BAG.

STORING YOUR TENT..

Store your tent away in a dry place, free of damp and excessive condensation. We would advise placing it in a high place, away from rodents!



CLEANING YOUR TENT



To remove any dirt, light marks or mud off your tent you will need to pitch it before cleaning. To tackle marks we advise a sot mop, a soft brush and sponge to apply either:

'NIKWAX TENT AND GEAR SOLARWASH' OR 'NIKWAX COTTON PROOF'

...before rinsing off with water.

To remove any dirt, light marks or mud off your tent you will need to pitch it before cleaning. If you're looking to wash the whole tent we advise mixing the cleaning agents above with water in a pump action pressure garden sprayer.

SHOP OUR
CLEANING
PRODUCTS



WATCH
DEMONSTRATION
VIDEO





REPROOFING YOUR TENT



Your tent will have a generous coating of our water, rot and UV repelling agent. Over time, as a result of heavy use or testing environments, your tent fabric may require a second coating to revive breathability and resistance to the elements.

This can be done by using a garden spray to apply the following agents:

'NIKWAX TENT AND GEAR SOLARWASH' OR 'NIKWAX COTTON PROOF'

READ OUR FULL
MAINTENANCE
GUIDE



RETURNS POLICY

We are certain you are going to love your next text, however, if you have a change of heart you are entitled to a refund or exchange within 14 days of receiving your item/s. Please note, unpackaged or used tents may be subject to this. To make your request, please complete the online returns form on our website:

www.boutiquecamping.com/return-form-i524


HAVE A CAMPING QUERY?



EMAIL US:
[INFO@BOUTIQUECAMPING.COM](mailto:info@boutiquecamping.com)
and WE'LL BE HAPPY TO ASSIST!



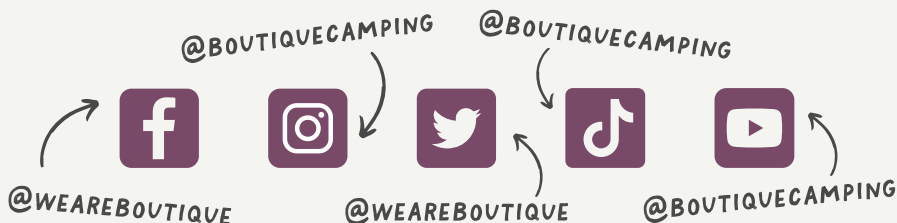

LET'S CONNECT!



We'd love to see where your adventure takes you!

Whether it's a reel, a pitching time lapse, or a stunning setup pic, let us and the world see! Don't forget to give us a follow and TAG us, your creation could be featured on our socials and website!

 www.boutiquecamping.com | +44 (0) 203 319 1315 | info@boutiquecamping.com

 www.belltent.com | +1(929) 334 3212 | info@belltent.com